




SOLAR METAL RIDGEBLASTER™



Step 1: Copper Clad Hangers

Insert the copper clad hangers into the fan unit as pictured so the sticker will be pointing down into the shed.

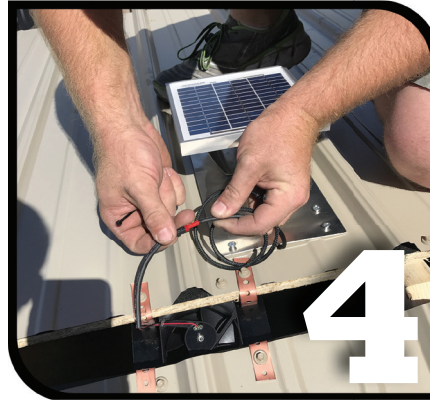


Step 4: Connect the wires

Attach the two ends of the wires.



Step 2: Attach Fan

Insert the fan unit down into the ridge vent opening making sure the fan is level and square with the ridge opening. Secure the copper clad hangers with four of the 3/4" self-drilling screws. Trim off any excess copper if desired.

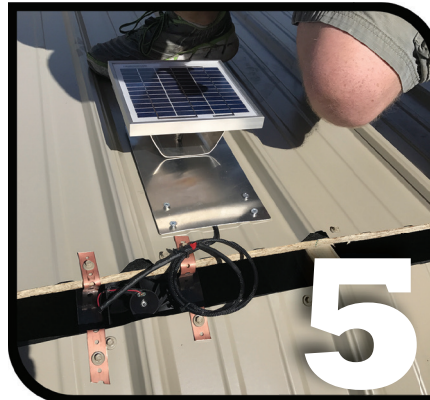


Step 5: Tidy Up

Use the included zip ties to tidy up the wire.



Step 3: Measure & Attach

Mark where the ridge vent cover will come down on the roof deck as you will then need to install the panel unit below that mark. You may need to pre-drill holes for the last four 1.5" self-drilling screws to attach the solar panel unit.

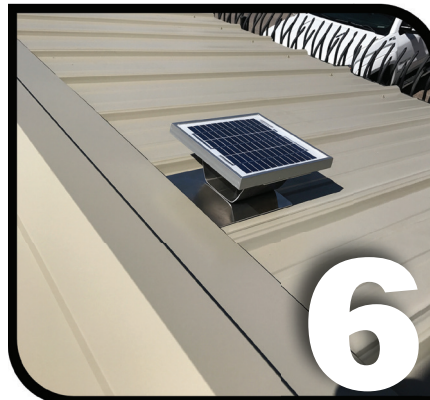

Step 6: Attach Cover

Final step is to attach the ridge vent cover.